


**Clean Air  
PRODUCTS**

8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445  
800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004  
www.cleanairproducts.com

# **Pass Thru - Wall Mount CAP18W - Options Spec Sheet Option: Magnetic Interlock**

(CAP18W-SST-30Wx30Hx30D Shown Below)

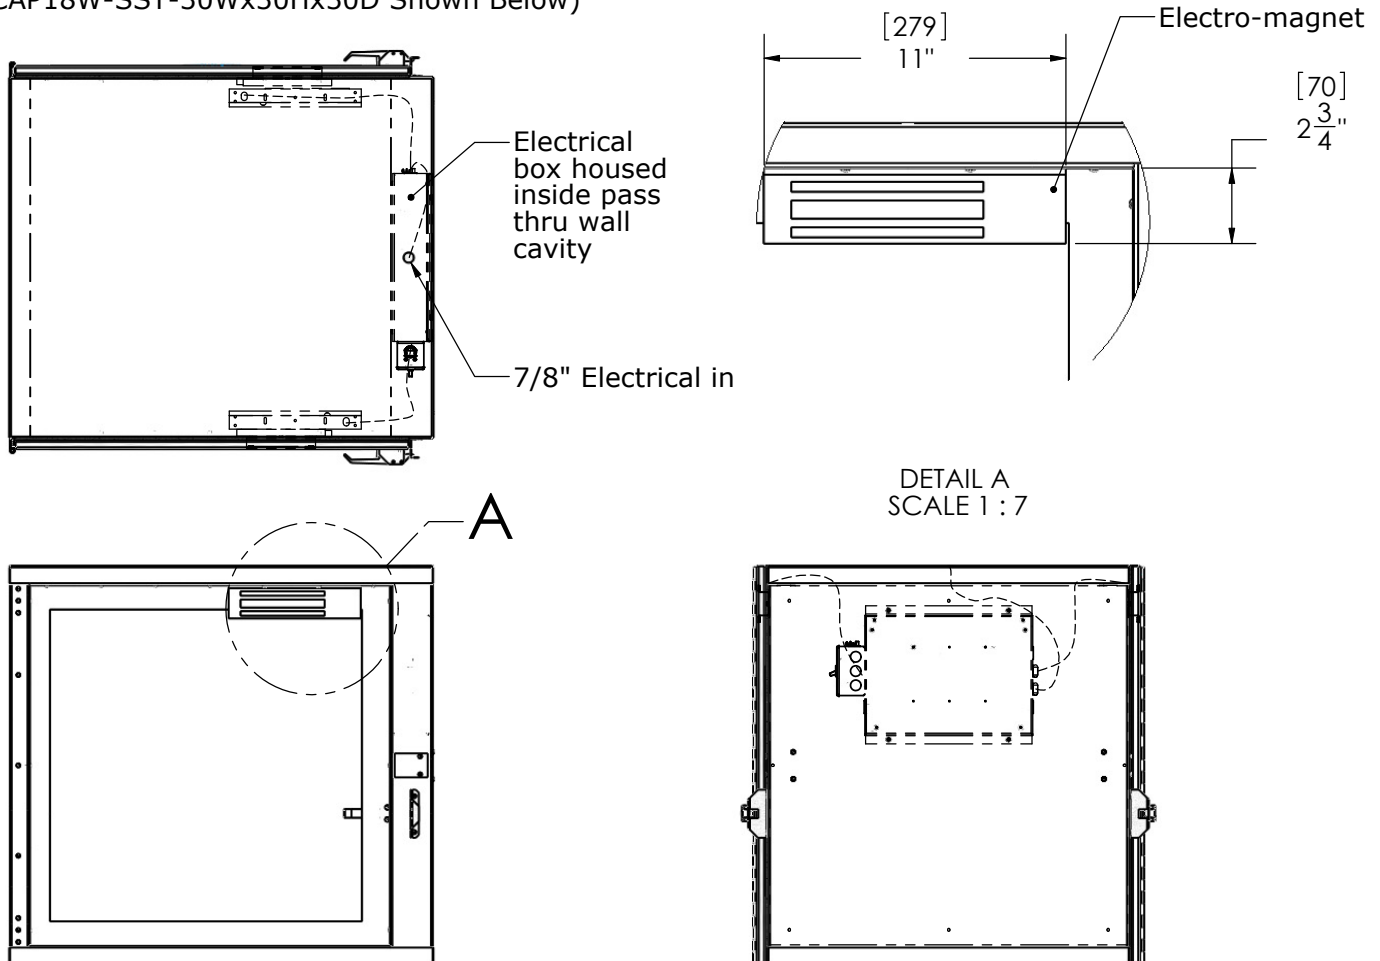

(Front door removed for electro-magnet clarity)

## **Magnetic Interlock:**

The magnetic interlock allows only one door to be open at a time. This function reduces contamination and controls air evacuation with pressurized clean rooms.

Our magnetic interlocks are mounted to the pass thru ceiling on the latch side of the door. If a door is opened, power is supplied to the opposing door electro-magnet, and an armature located on the pass thru door secures the door, until the opposing door is shut. The electro-magnet protrudes down from the ceiling 2 3/4" [70].

Operation is one handed, and is available on most pass thru applications

Power requirements: 120 Volts, 60 Hz, 0.2 Amps