



NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

L.H. Swing Door

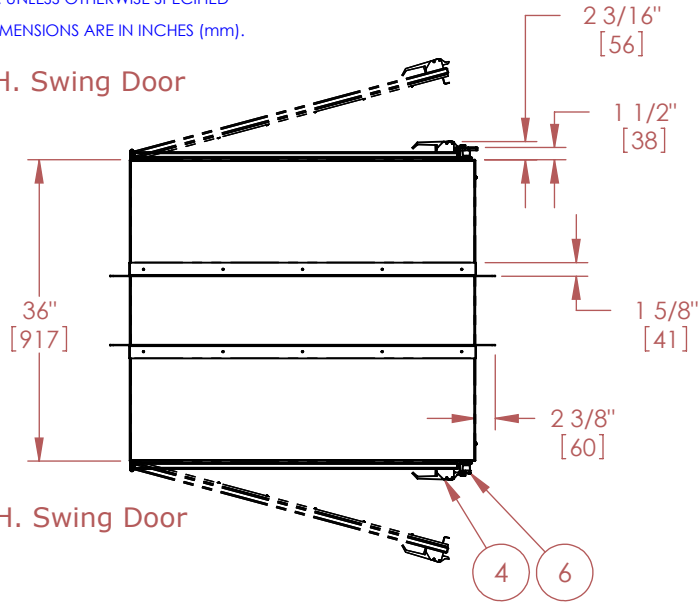

R.H. Swing Door

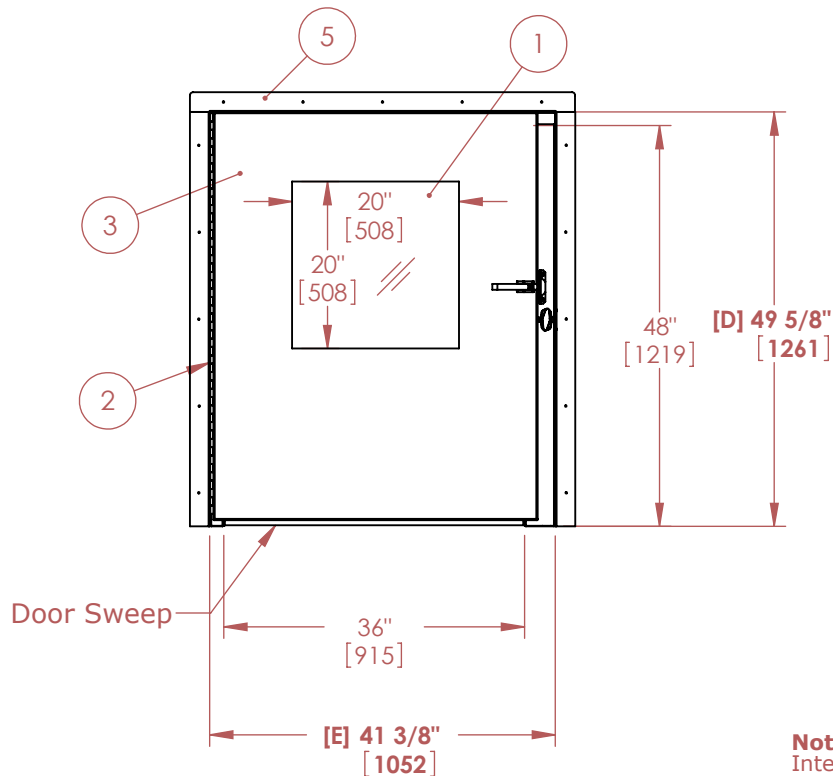

Features:

1. Clear Tempered Safety Glass
2. Stainless Steel Flush Mount Hinge
3. Stainless Steel Door Frame
4. Latch, Compression, Overcenter Lever - Chrome Plated

Pass Thru Operation - One Hand:



Turn Interlock Handle (6) to Operate Interlock  
Pull Door Latch Handle (4) to open door

Options Shown:

5. 6 Pc. Stainless Steel Mounting Frame
6. Interlock Handle, T, Non-Locking Satin Chrome

Notes:

1. Wall Cutout is **41-7/8" x 50-1/8"**  
( [E] + 1/2" x [D] + 1/2" )
2. Material: Stainless Steel, Type 304, #4 Finish
3. Electrical Requirements: None

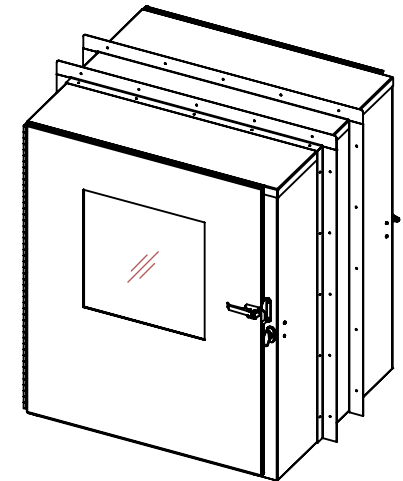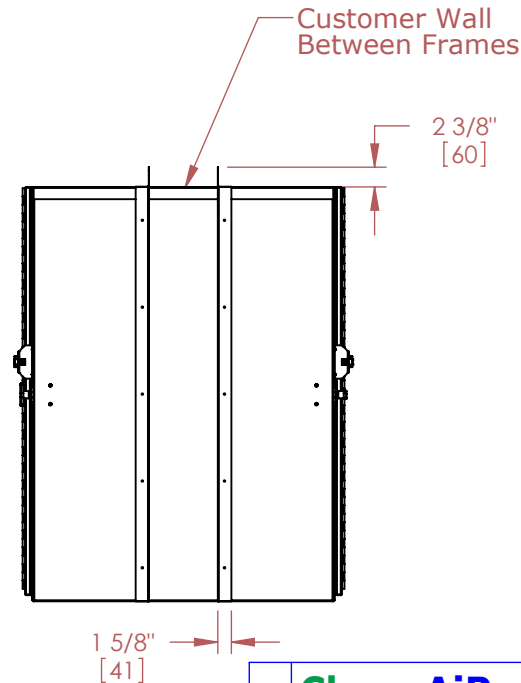

**Note:**  
Interlocking and non-interlocking units have the same exterior dimensions unless noted

COPYRIGHT 2010 CLEAN AIR PRODUCTS	<b>Clean Air PRODUCTS</b>		8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445 800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004 www.cleanairproducts.com		
	DESCRIPTION.		<b>Pass Thru - Floor Mount, Stainless Steel - CAP18F-SST-36Wx48Hx36D</b>		
	QUOTE NO.		[Blank]		
	<b>DO NOT SCALE</b>	DATE DRAWN 08/09/2010	QUOTE FORM 010249	REV 1	SHEET 1 of 2

**Series CAP18 Pass Thru Options List**  
**CAP18F-SST**

**Material Options:.....** Type 316L #2b Finish Stainless Steel.....  
Electropolished Type 316L #2b finish Stainless Steel.....  
Electropolished Type 304 #4 finish Stainless Steel.....  
Powder Coated Painted Cold Rolled Steel  
- Clean Air Products Standard White.....  
Powder Coated Painted Cold Rolled Steel  
- Customer-Specified Color.....

**Window Options:.....** Maximum Possible Window Size.....  
Clear Wire Safety Glass.....  
Clear Laminated Safety Glass.....  
Amber Tempered Safety Glass.....  
Clear PVC.....  
Tinted Electrostatic Dissipative (ESD) PVC.....  
Clear Polycarbonate.....  
Clear Acrylic.....  
Yellow Acrylic.....  
Amber Acrylic.....  
Tinted Ultra-Violet Light Filtering Acrylic.....  
No Window (Solid Stainless Steel Door).....

**Interlock Options:...** Mechanical Interlock.....  
Type 304 Stainless Steel Mechanical Interlock Handle.....  
Type 316 Stainless Steel Mechanical Interlock Handle.....  
Internal Mount Magnetic Interlock  
(Reduces inside height by 2-3/4 inches).....

**Mounting Options:...** 6 Piece Stainless Steel Mounting Frame.....  
6 Piece Stainless Steel Flush-Style Mounting Frame.....  
6 Piece Stainless Steel Sloped Top Mounting Frame.....

**Design Options:.....** Solid Stainless Steel Adjustable Shelf.....  
Perforated Stainless Steel Adjustable Shelf.....  
Key-Locking Chrome Plated Lever Compression  
Door Latches.....  
Type 304 Stainless Steel Lever Compression Door  
Latches.....  
Type 316 Stainless Steel Lever Compression Door  
Latches.....  
Dual Chrome Plated Lever Compression Door Latches  
with Bar Handle.....  
Dual Type 304 Stainless Steel Lever Compression Door  
Latches with Bar Handle.....  
Dual Type 316 Stainless Steel Lever Compression Door  
Latches with Bar Handle.....  
Duplex Receptacle with Stainless Steel Cover.....  
UV Light without Timed Shut Off.....  
UV Light with Timed Shut Off.....  
Ventilation Couplings.....  
Door Position Indicator Lights.....  
Low-Outgassing Design.....  
Interior Wall Rub Rails.....