

CAP 18FVS

Floor Mount Manual Vertical Sliding Door Pass Thru



The CAP18FVS Floor Mounted Manual Vertical Sliding Doors Pass Thru airlock cleanroom entry system is for the efficient transfer of large parts and wheeled carts in and out of a cleanroom with sliding vertical doors that provide access in confined spaces or where a standard swing door is not suitable.

The CAP18FVS balances high quality construction and designed-in value in several ways. Built with an innovative double wall design, stainless steel integrity, and solid construction, the CAP18FVS has a "lipless" floor design that permits carts to smoothly roll in and out, while the double wall construction stands up to accidental bumping. The center-weighted doors are easily opened and closed with Anodized aluminum door pulls, and generously sized clear acrylic viewing windows enhance safety and convenience.

The CAP18FVS is a space-saving solution for cleanroom access that provides an elegant look to your cleanroom.



For more information or to download or fax this product from the web, go to:
www.cleanairproducts.com/18W


Standard features

- Fitted and stitch-welded Type 304 #4 finish Stainless Steel construction
- Counter-weighted, manually-operated, vertical sliding doors
- Clear acrylic viewing windows
- Anodized aluminum door pulls
- Maximum interior width: 92 inches



Options

- Electropolished Type 304 #4 finish Stainless Steel
- Type 316L #2b finish Stainless Steel
- Electropolished Type 316L #2 finish Stainless steel
- 6-Piece Stainless steel Mounting Frame
- Push Rod Interlock
- Door window material options including Clear Tempered, Clear Wire , Clear laminated and Amber Tempered Safety Glass; Clear PVC and Tinted ESD PVC, Clear Polycarbonate, Yellow, Amber and Tinted UV Acrylic and Stainless Steel (no window)
- Stainless Steel Adjustable Shelf
- Perforated Stainless steel Adjustable Shelf
- Solid Stainless Steel Adjustable Shelf
- Perforated Stainless Steel Adjustable Shelf
- Solid Stainless Steel Non-adjustable Set-In Shelf
- Perforated Stainless Steel Non-adjustable Set-In Shelf
- Stainless Steel Catch Tray
- Duplex Receptacle with Stainless Steel Cover

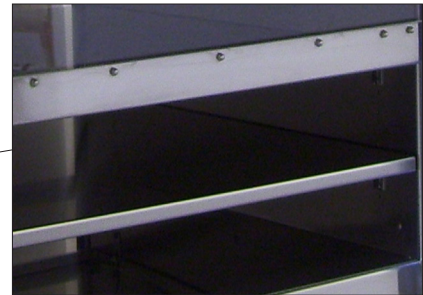

Specifications subject to change. Please contact factory for details.




Solutions Built to Your Specifications.

8605 Wyoming Ave. N. • Minneapolis MN 55445

tel: 763.425.9122 800.423.9728 fax: 763.425.2004

e-mail: sales@cleanairproducts.com www.cleanairproducts.com

CAP18 FVS Pass Thru Air Lock Cleanroom Entry System

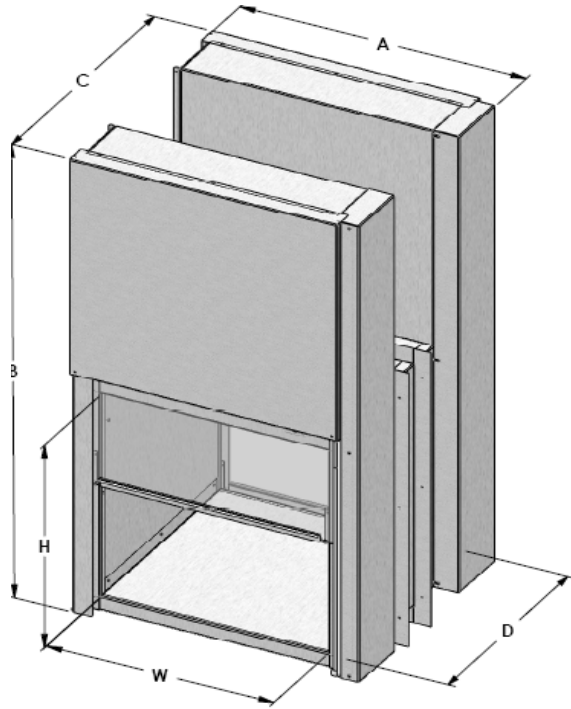

CAP18FVS Pass Thrus— Dimensions-inches

MODEL #	Inside Dimensions			Outside Dimensions		
	W	H	D	A	B	C
CAP18FVS-SST-12Wx12Hx24D	12	12	24	20	31	30
CAP18FVS-SST-18Wx18Hx24D	18	18	24	26	43	30
CAP18FVS-SST-24Wx24Hx24D	24	24	24	32	55	30
CAP18FVS-SST-30Wx30Hx30D	30	30	30	38	67	36
CAP18FVS-SST-36Wx24Hx36D	36	24	36	44	55	42
CAP18FVS-SST-36Wx36Hx36D	36	36	36	44	79	42
CAP18FVS-SST-42Wx24Hx36D	42	24	36	50	55	42
CAP18FVS-SST-42Wx36Hx42D	42	36	42	50	79	48
CAP18FVS-SST-42Wx42Hx42D	42	42	42	50	91	48
CAP18FVS-SST-48Wx24Hx36D	48	24	36	56	55	42
CAP18FVS-SST-48Wx36Hx36D	48	36	36	56	79	42

Sizes and Weight

The CAP 18FVS is available in many standard sizes. Unit sizes are based on inside dimensions.

Weight depends on size and options package. Contact us if you have any questions.

Guarantee

A written 1 year warranty is furnished with each air lock.

Specifications subject to change. Please contact factory for details.



Solutions Built to Your Specifications.

8605 Wyoming Ave. N. • Minneapolis MN 55445

tel: 763.425.9122 800.423.9728 fax: 763.425.2004

e-mail: sales@cleanairproducts.com www.cleanairproducts.com