


Pass Thru - Wall Mount CAP18W- Options Spec Sheet

Option: 8 Piece, stainless steel sloped top mounting frame

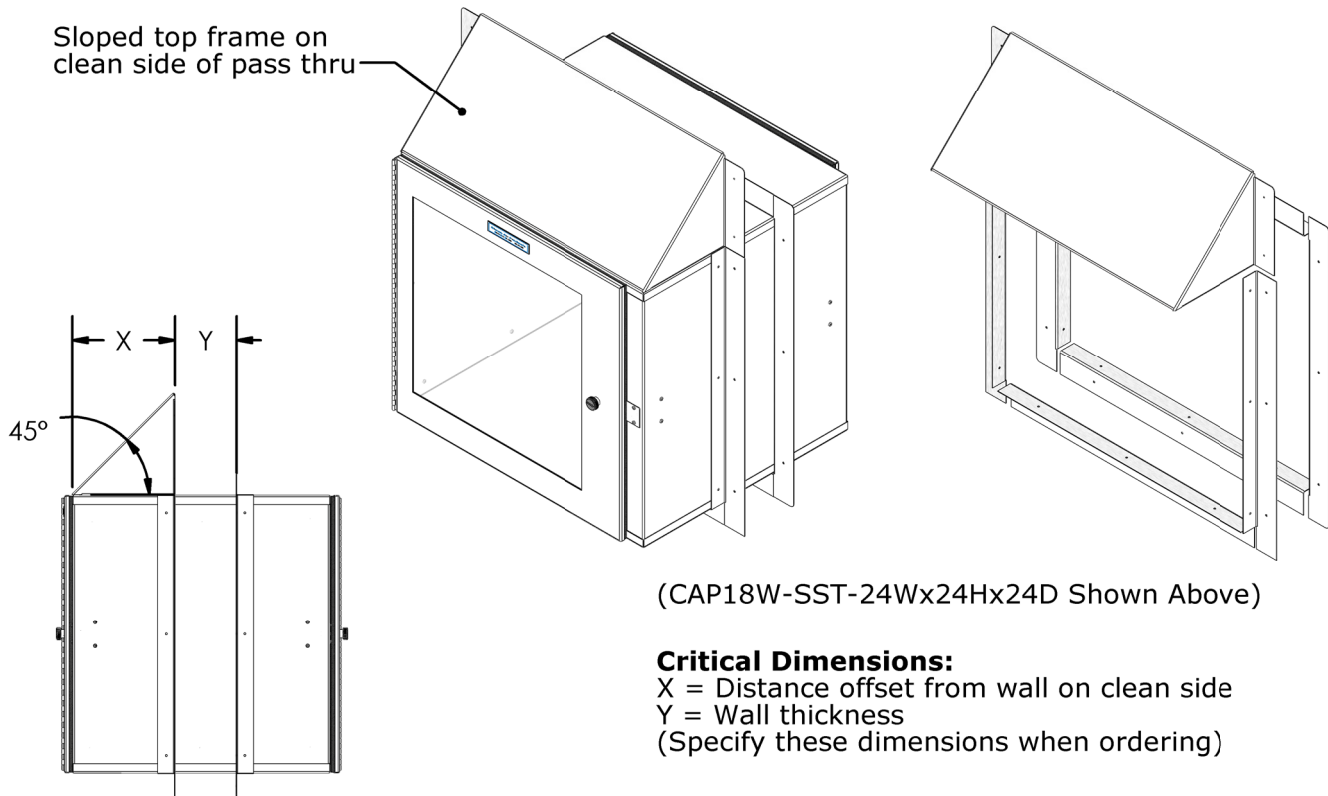

8 piece, stainless steel sloped top mounting frame:

The 8 piece sloped top mounting frame is normally purchased when the top surface of the pass thru needs to be extra clean and particle free. The 45° slope of the top mounting frame eliminates a flat surface and provides a surface that is easily cleaned.

Sloped top mounting frames on all stainless steel and polypropylene pass thru units are type 304 #4 finish stainless steel.

A pass thru with an upgraded finish such as cold-rolled painted units or upgraded stainless steel such as type 316, can have mounting frames of the same material or finish upgrade.

Sloped top mounting frames are easy to install and provide a clean look to cover any rough cut opening.

Hardware for mounting frames are included.

Frame sets are installed and drilled per customer location in the field.