
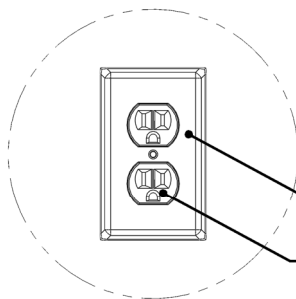
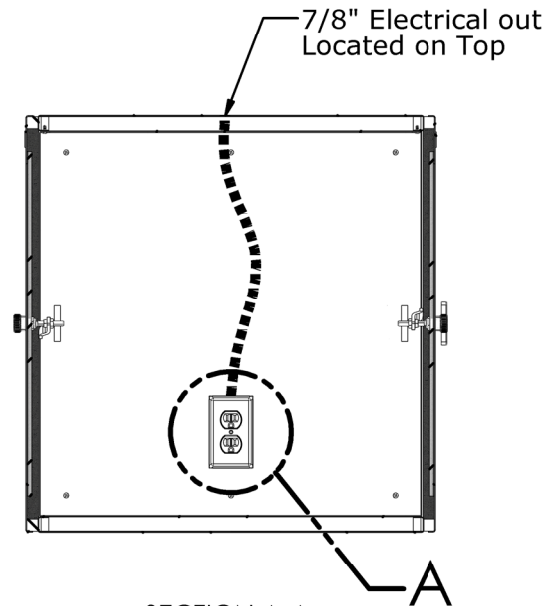


Pass Thru - Wall Mount CAP18W - Options Spec Sheet Option: Receptacle

(CAP18W-SST-24Wx24Hx24D with
Mechanical Interlock Option Shown Below)

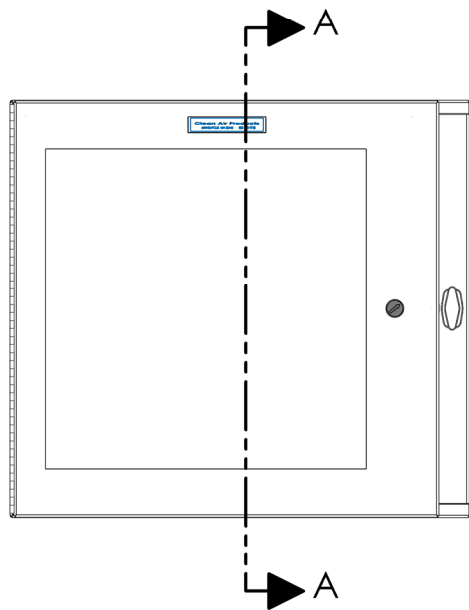

Stainless Steel Cover

Receptacle, Standard Duplex
NEMA 5-15R 15A, 125V, White

DETAIL A
SCALE 1 : 5

Receptacle:

The receptacle option mounts a receptacle to the inside liner cover, positioned on the lower third of the pass thru, centered on the depth. A standard 15 Amp, 125 Volt, NEMA 5-15R residential grade, grounding duplex receptacle is used, and covered with a stainless steel cover. Electrical connection pigtails out the top of the unit for connection to power in the field. The standard receptacle is not a GFI receptacle, but can be upgraded.

(Other mounting locations available upon request)