



# **Pass Thru - Wall Mount CAP18W - Options Spec Sheet Option: Shelf, Non-adjustable, Set-in**

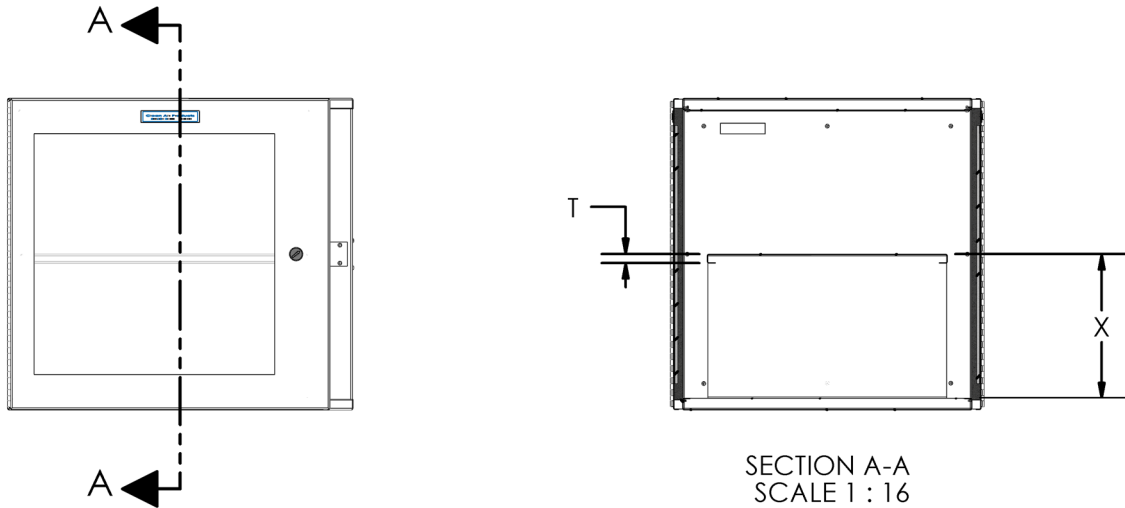

(CAP18W-SST-24Wx24Hx24D Shown Above)

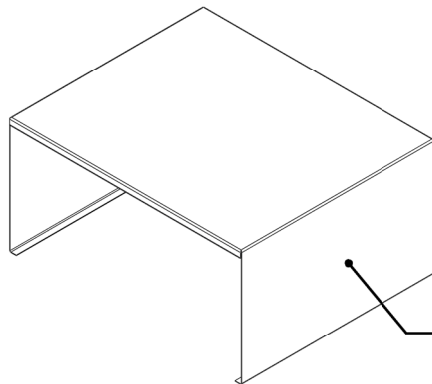

Stainless Steel Shelf Pan

**X = Shelf Height:**  
1/2 the inside compartment height  
(Custom heights available upon request)

**T = Shelf Thickness:**  
(Varies with size - 3/4" minimum)

\* Perforated shelves  
available for HEPA  
filtered and exhausting units

## **Shelf, Non-adjustable, Set-in:**

The Non-adjustable, set-in shelf can be easily added to all pass thrus from the factory or in the field. Customers may request a custom height or material to fit their specific application. Shelf thickness "T" will vary depending on size and application.

Set in shelves on all stainless steel and polypropylene units are type 304 #4 finish stainless steel.

Pass thrus with upgraded finish such as cold-rolled painted units or upgraded stainless steel such as type 316, can have shelves of the same material or finish upgrade.

No hardware required.