


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

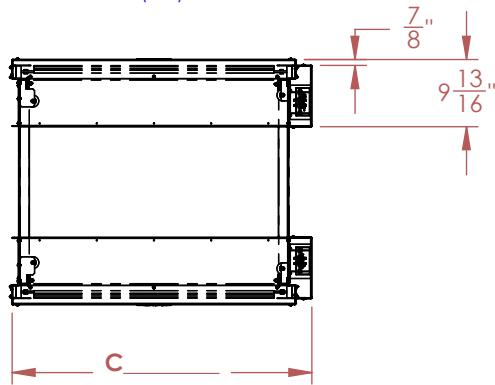

**W = Inside Width**  
**H = Inside Height**  
**D = Inside Depth**  
**A = W + 3 3/8"**  
**B = H + 5 13/16"**  
**C = W + 7 3/4"**  
**G = 2\*H + 7 5/8"**  
**E = D + 4"**

**Features:**

1. Clear Tempered Safety Glass
2. Aluminum Window Pull

**Options Shown:**

3. Mechanical Interlock Push Rod


**Notes:**

1. Wall Cutout is  $\frac{X}{([A] + \frac{1}{2}'' \times [B] + \frac{1}{2}'')}$
2. Material: Stainless Steel, Type 304, #4 Finish
3. Electrical Requirements: None



**Pass Thru Operation - One Hand:**

Push In Interlock Rod (3) to Operate Interlock

Pull Up on Window Pull (2) to open door

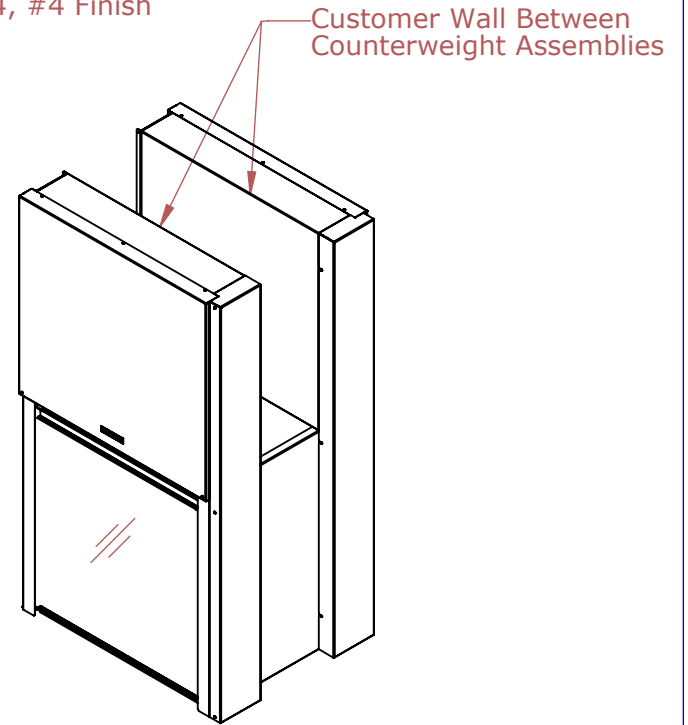

Note: Removal of one counter weight door assembly is needed to install unit

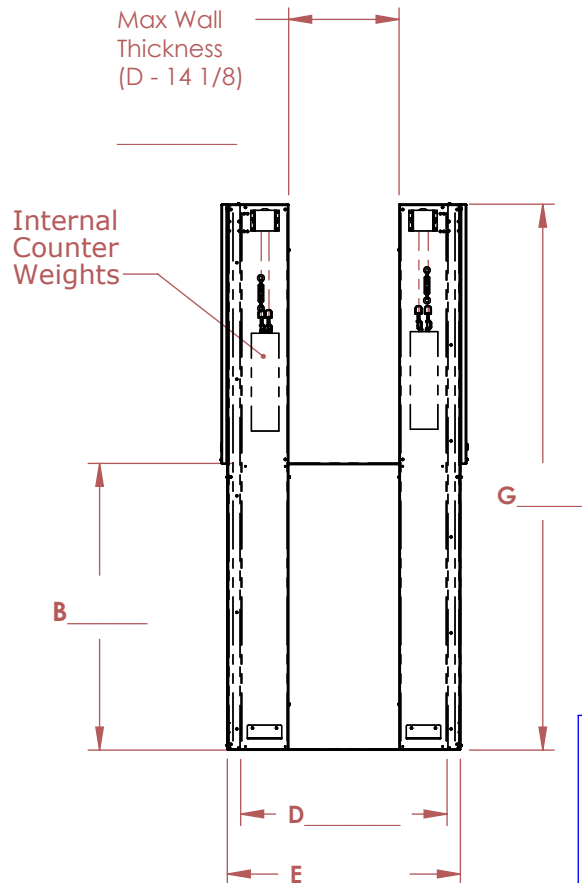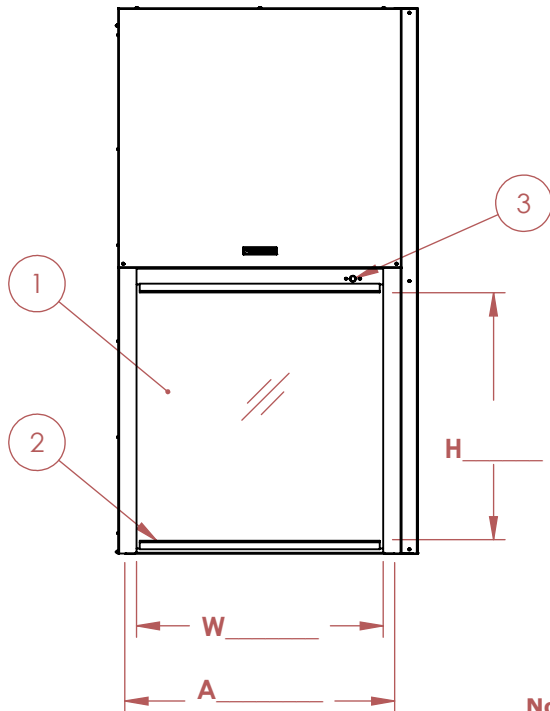

**Note:** Interlocking and non-interlocking units have the same exterior dimensions unless noted

COPYRIGHT 2010 CLEAN AIR PRODUCTS	<b>Clean Air PRODUCTS</b>		8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445 800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004 www.cleanairproducts.com		
	DESCRIPTION: <i>Pass Thru - Vertical Sliding Window, Stainless Steel</i>				
	<i>CAP18WVS-SST-_____ Wx _____ Hx _____ D</i>				
	QUOTE NO. _____				
<b>DO NOT SCALE</b>		DATE DRAWN 11/02/2010	QUOTE FORM 012750	REV 1	SHEET 1 of 2

**Series CAP18 Pass Thru Options List**  
**CAP18WVS-SST**

**Material Options:.....** Type 316L #2b Finish Stainless Steel.....  
Electropolished Type 316L #2b finish Stainless Steel.....  
Electropolished Type 304 #4 finish Stainless Steel.....  
Powder Coated Painted Cold Rolled Steel  
- Clean Air Products Standard White.....  
Powder Coated Painted Cold Rolled Steel  
- Customer-Specified Color.....

**Window Options:.....** Clear Wire Safety Glass.....  
Clear Laminated Safety Glass.....  
Amber Tempered Safety Glass.....  
Clear PVC.....  
Tinted Electrostatic Dissipative (ESD) PVC.....  
Clear Polycarbonate.....  
Clear Acrylic.....  
Yellow Acrylic.....  
Amber Acrylic.....  
Tinted Ultra-Violet Light Filtering Acrylic.....  
No Window (Solid Stainless Steel Door).....

**Interlock Options:...** Mechanical Interlock (Push Rod Style).....

**Mounting Options:...** 8 Piece Stainless Steel Mounting Frame.....  
8 Piece Stainless Steel Flush-Style Mounting Frame.....  
8 Piece Stainless Steel Sloped Top Mounting Frame.....  
Stainless Steel Support Gussets.....  
Stainless Steel Support Legs.....

**Design Options:.....** Solid Stainless Steel Adjustable Shelf.....  
Perforated Stainless Steel Adjustable Shelf.....  
Solid Stainless Steel Non-Adjustable Set-In Shelf.....  
Perforated Stainless Steel Non-Adjustable Set-In Shelf.....  
Stainless Steel Catch Tray.....  
Duplex Receptacle with Stainless Steel Cover.....  
UV Light without Timed Shut Off.....  
UV Light with Timed Shut Off.....  
Ventilation Couplings.....