
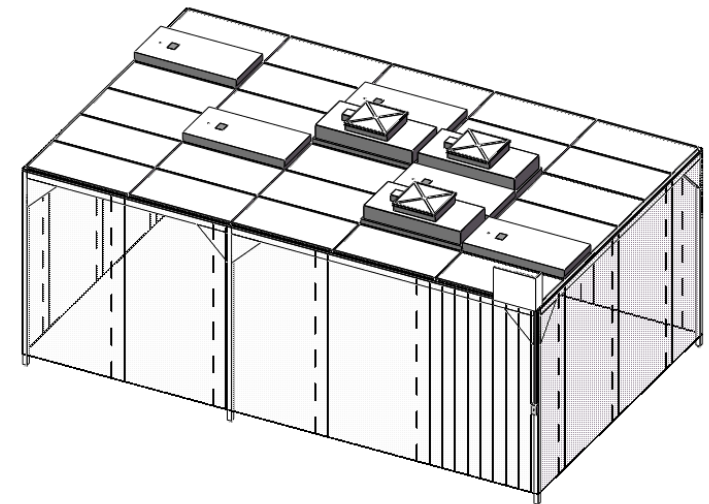
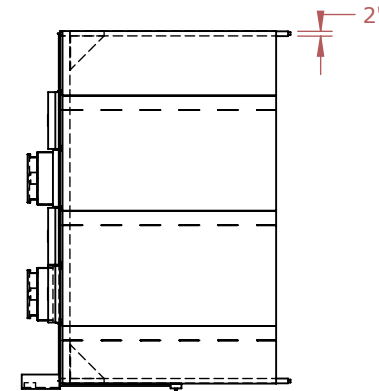


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

CLASS 100,000 ROOM SHOWN

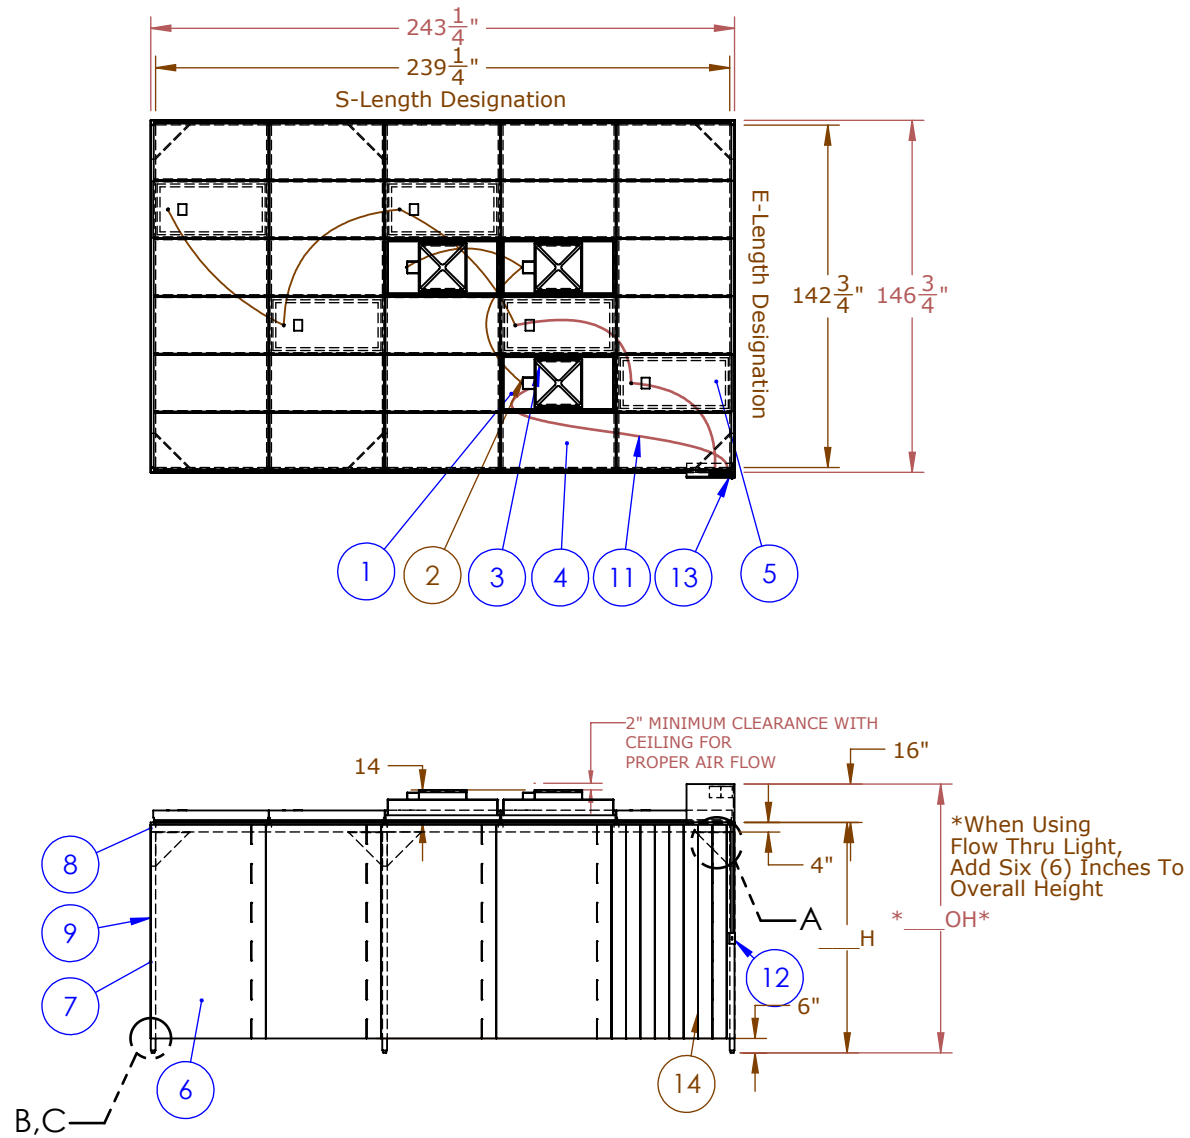


© COPYRIGHT 2010. CLEAN AIR PRODUCTS	Clean Air PRODUCTS	8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445 800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004 www.cleanairproducts.com
	DESCRIPTION.	Softwall Cleanroom CAP577F-WR-12x20x8H-E12-S12,8
	QUOTE NO.	
	DO NOT SCALE	DATE DRAWN 03/15/2012
		QUOTE FORM AN001320
		REV 1
		SHEET 1 of 2


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

Gusset Length Detail A

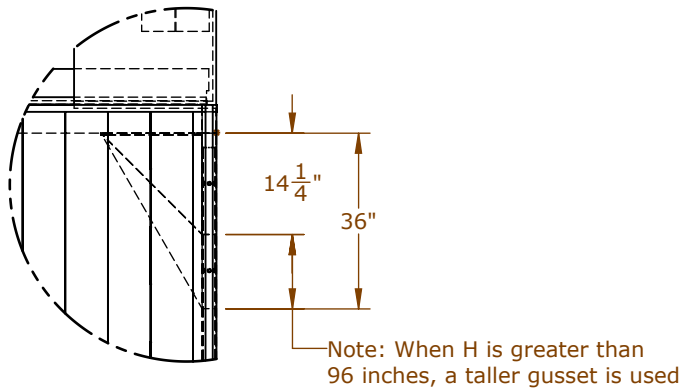


Standard Leg Leveler Detail B

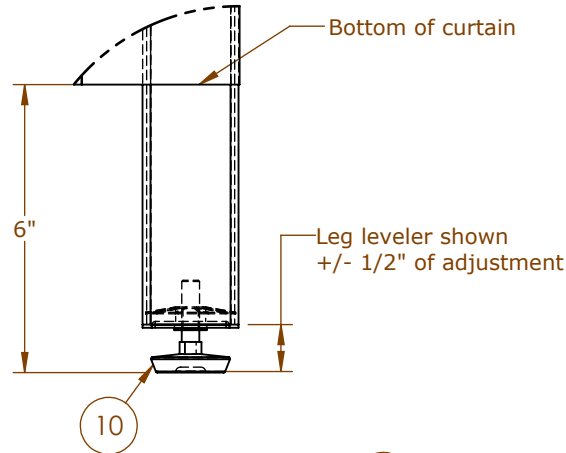

Optional Caster with Brakes Detail C

Note: Casters only available on rooms with six legs or less
Note: Adding casters will not effect overall height of clean room

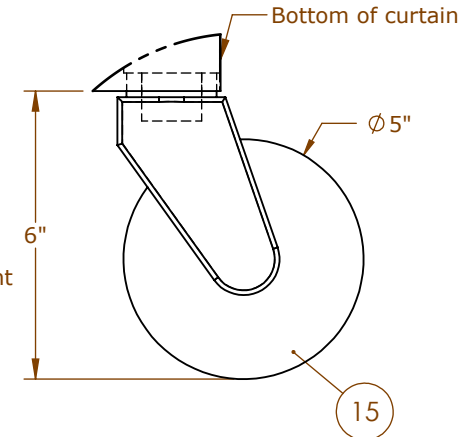


Notes:


1. CAP112-424 Motorized Ceiling HEPA Filter
2. Electrical Junction Box
3. Prefilter
4. Blank Panel - White Vinyl Covered Gypsum Board With Sealed Edges
5. Light - Fluorescent With Lamps
6. Static Dissipative, flame retardant, clear vinyl curtains, Dual Lock mounting
7. Legs - 2 in. x 2 in. Tubular Steel With Corner Support Gusset
8. Bolt Together, 2 in. x 4 in., Tubular Steel Beams
9. White painted steel frame, powder coated
10. Plated steel leg levelers

Optional

11. Modular Prefabricated Wiring, 11 ft
12. Light Switch Included With Prefabricated Wiring Option
13. Electrical Junction Box With Prefabricated Wiring Option
14. Strip Door - 80 mil, flame retardant, clear vinyl
15. Casters with Brakes

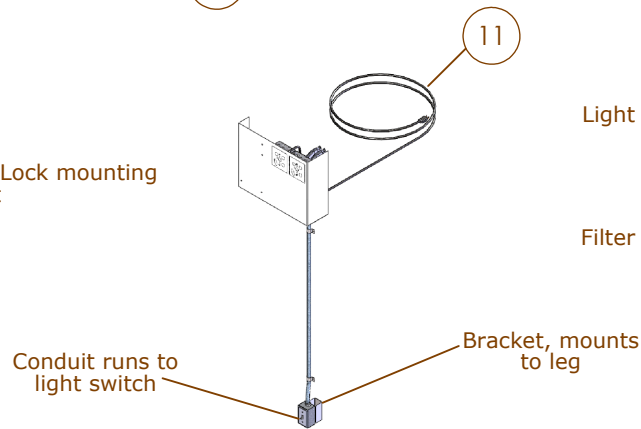

Electrical subassembly panel included with pre-fabricated wiring option

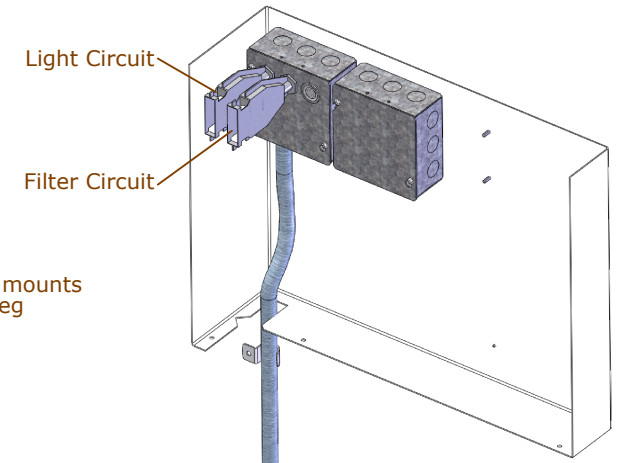

ISO Class	ISO 4		ISO 5		ISO 6		ISO 7		ISO 8	
Fed Std 209E Class	10		100		1,000		10,000		100,000	
Flow Thru Filter/Light (4.2 FLA / 3.6 Amp)	30		-		-		-		-	
Number of Filters (3.2 FLA / 2.8 Amp)	-		15		11		6		3	
Number of Lights (1 FLA / 1.0 Amp)	-		5		5		5		5	
Total FLA/A (120V, 1 - Phase)	126FLA	114A	53FLA	47A	40.2FLA	35.8A	24.2FLA	21.8A	14.6FLA	13.4A
Number of 20 Amp Circuits	7	6	3	3	3	2	2	2	1	1

© COPYRIGHT 2010
CLEAN AIR PRODUCTS

**Clean Air
PRODUCTS**

8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445
800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004
www.cleanairproducts.com

DESCRIPTION.

Softwall Cleanroom
CAP577F-WR-12x20x8H-E12-S12,8

QUOTE NO.

DO NOT SCALE

DATE DRAWN
03/15/2012

QUOTE FORM
AN001320

REV
1

SHEET
2 of 2