
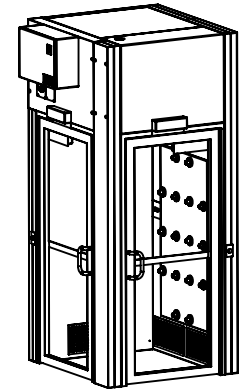
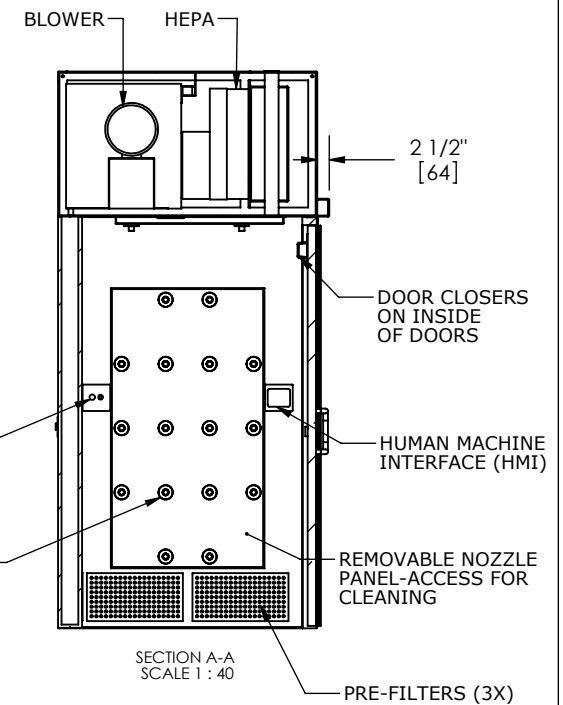
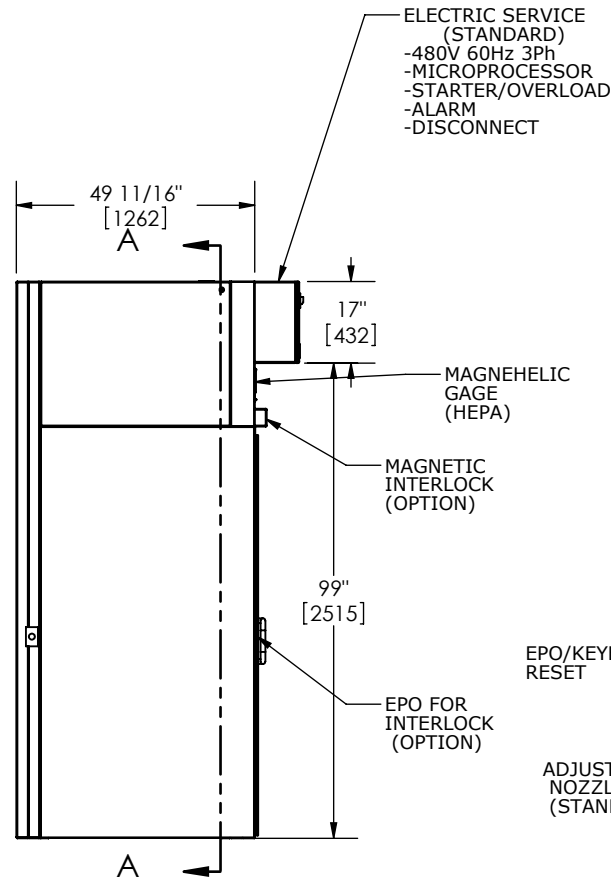
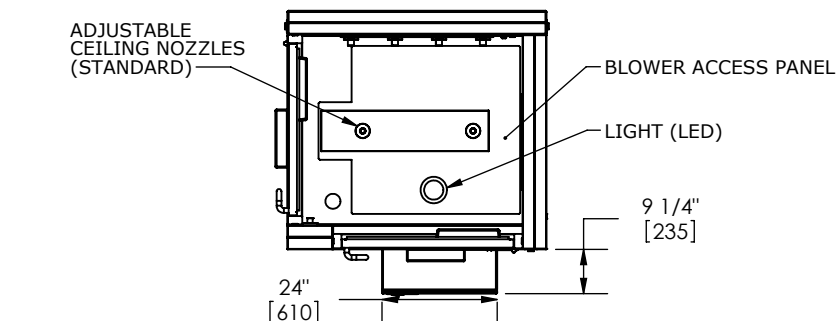
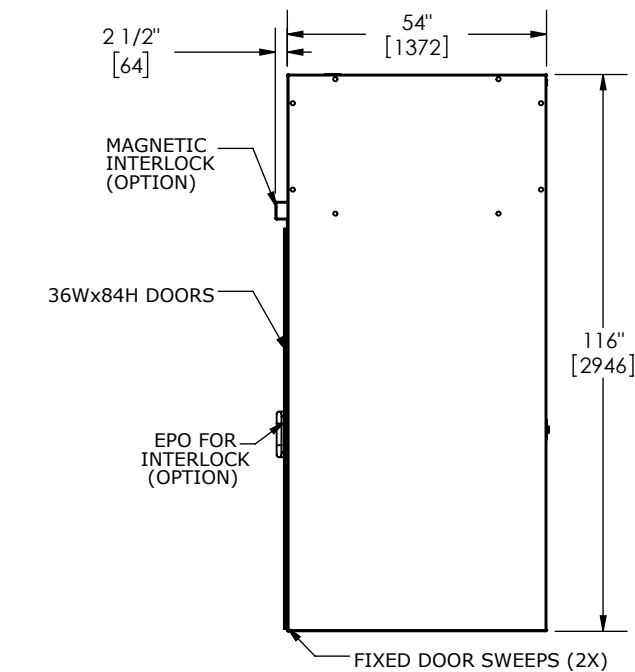


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

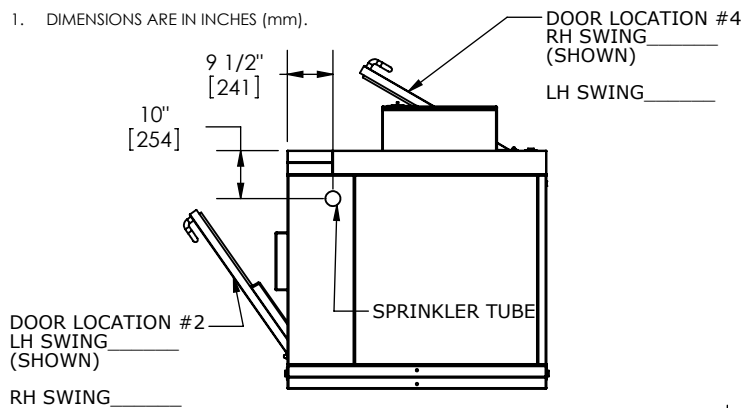

|                                        |                                                                                                                                                                |                         |                      |          |                 |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|----------------------|----------|-----------------|
| © COPYRIGHT 2010<br>CLEAN AIR PRODUCTS | <b>Clean Air PRODUCTS</b> 8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445<br>800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004<br>www.cleanairproducts.com |                         |                      |          |                 |
|                                        | DESCRIPTION. <b>Air Shower - 90 Degree</b><br><b>CAP701KD-LH-4954</b>                                                                                          |                         |                      |          |                 |
|                                        | QUOTE NO.                                                                                                                                                      |                         |                      |          |                 |
|                                        | <b>DO NOT SCALE</b>                                                                                                                                            | DATE DRAWN<br>2/22/2019 | QUOTE FORM<br>004149 | REV<br>3 | SHEET<br>1 of 2 |

## CAP701 Air Shower Specification Sheet

### Air Shower- CAP701KD-LH-4954, Quote

#### Standard Electrical:

**Motor:**..... 5HP, 3600RPM, 182T frame, open drip, sealed ball bearing, Qty. 1

**Blower:**..... High efficiency, Non-overloading aluminum airfoil, direct drive, overhead mounted

**Power Supply:**..... 480Volt, 60Hz, 3 Phase, 3 Wire w/Ground, 6.9 FLA, Gray painted steel electrical control panel, mounted above one door. Motor starter with electronic overloads inside control panel. Disconnect switch mounted on face of electrical control panel. UL Listed Panel.

#### Standard Construction:

**Shell:**..... Cold-rolled steel with white powder coat finish, interior and exterior.

**Doors:**..... Aluminum frame and Jamb, Clear safety glass (full), Closer on each door.

**Door Swing:**..... One Right Hand and One Left Hand. No charge for door swing change.

**Nozzles:**..... Anodized aluminum, adjustable, (32 Wall Nozzles, 2 Ceiling Nozzles). 1900 CFM. Nozzle Velocity: 7800 LFPM average.

**Filters:**..... HEPA: 24"x24"x11-1/2", 99.99% filtration of 0.3 micron particles.  
Prefilters: 10"x20"x1" Pleated Merv 8, 3 Total.

**Cleaning Cycle:**..... 0 to 99 sec. Microprocessor controller. ***Optional Interlocks Recommended***

**Service Access:**..... Filter, blower, motor, and light accessed from inside Air Shower.

**Shipping Method:**.. Shipped partially disassembled. When uncrated, components will fit through a standard 3'0"x7'0" door.

**Lighting:**..... LED Light with ON/OFF switch accessed via. human machine interface (HMI).

**Sprinkler Sleeve:**.. One sleeve per section. Qty. 1

#### Notes: