


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

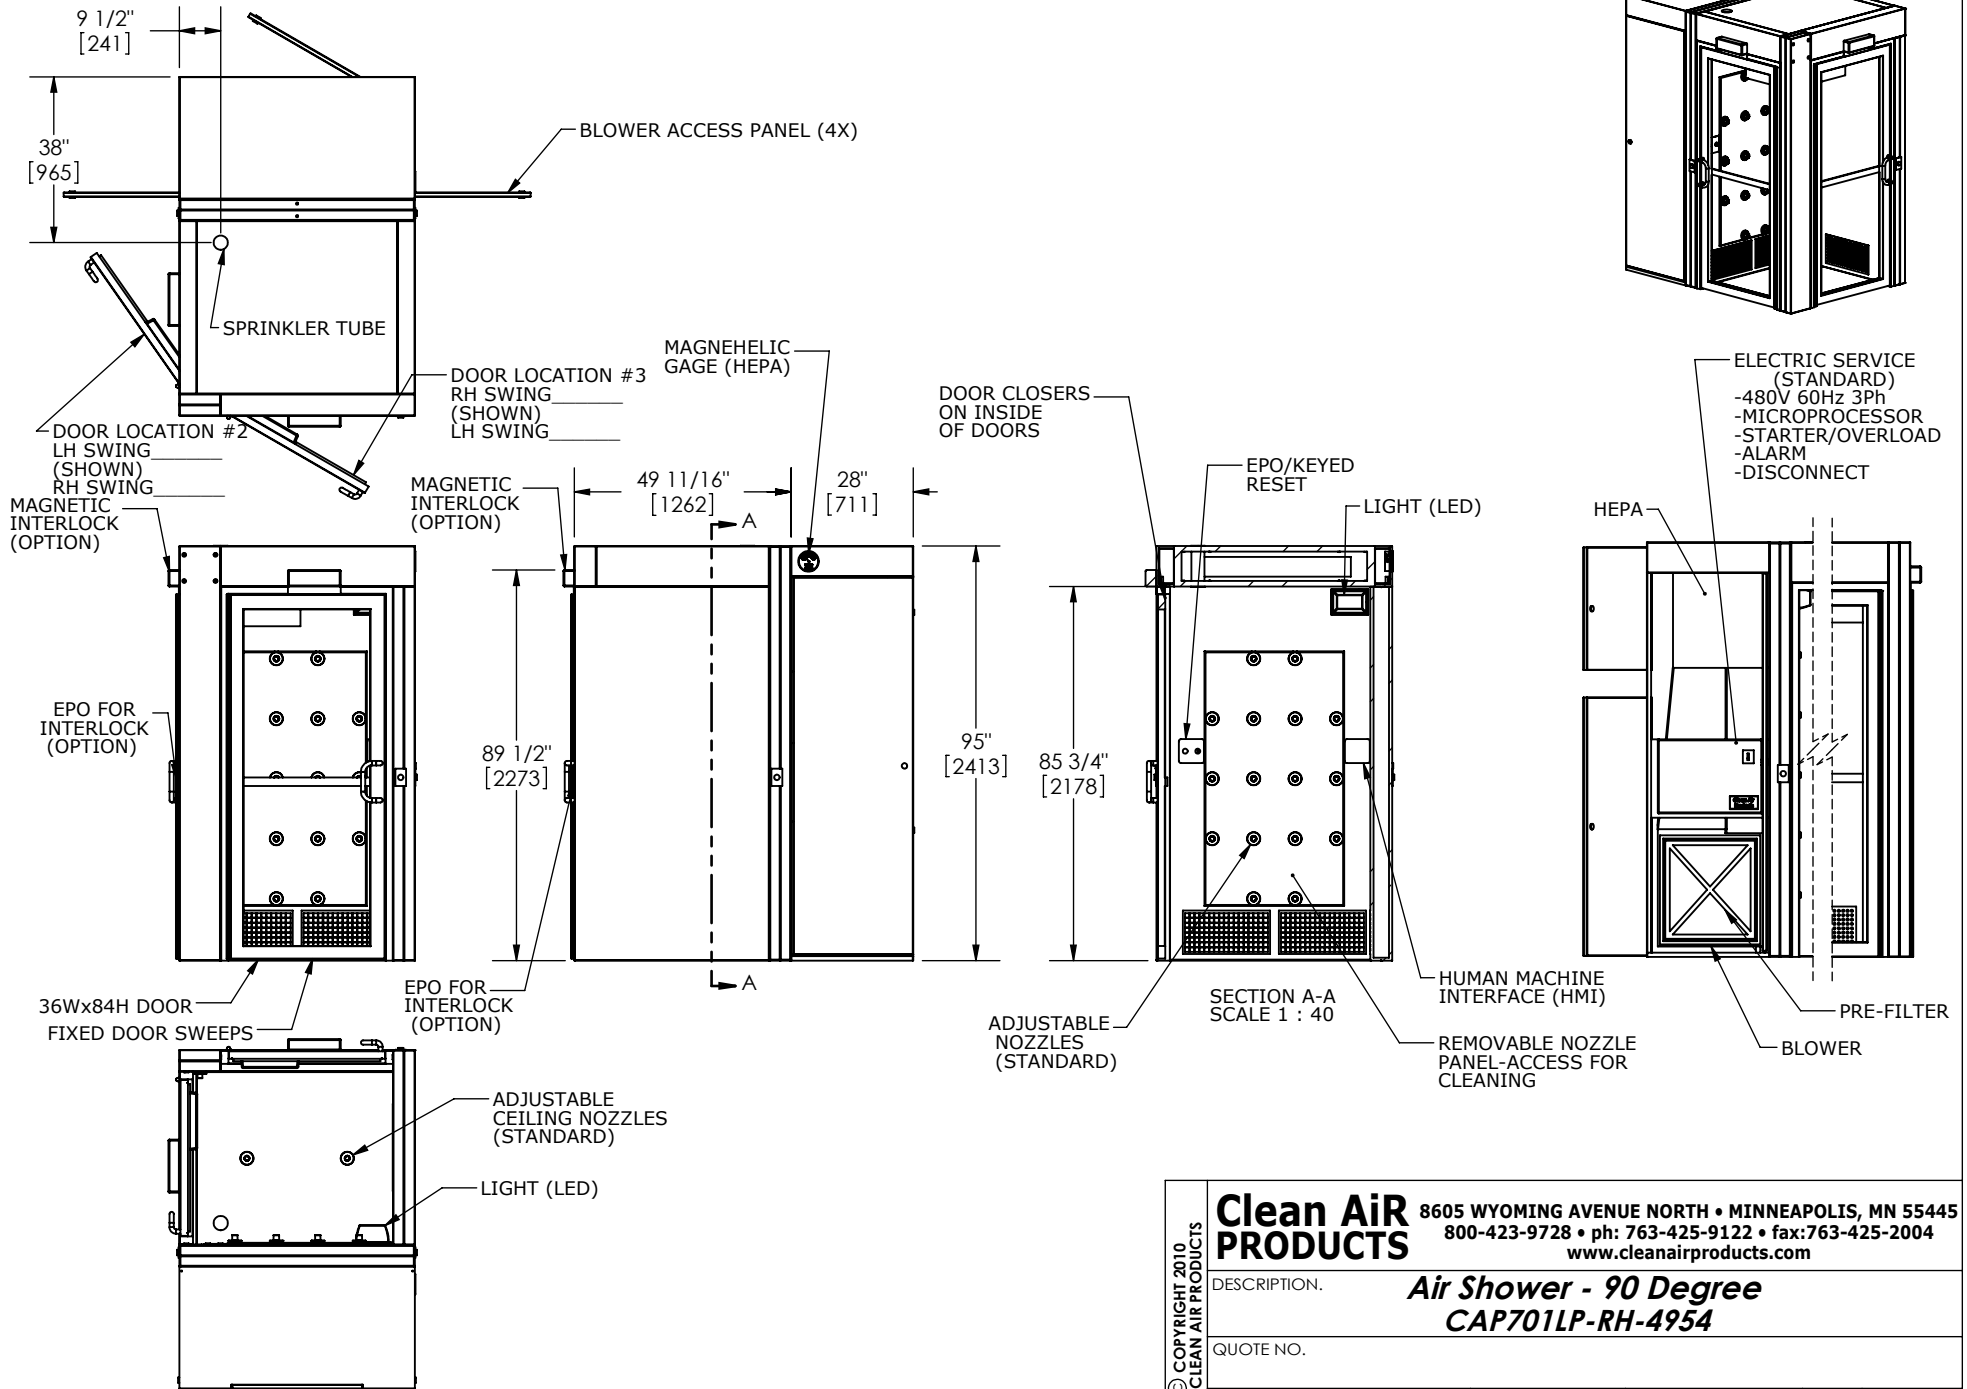

|  |                           |  |                      |          |
|--|---------------------------|--|----------------------|----------|
| © COPYRIGHT 2010<br>CLEAN AIR PRODUCTS | <b>Clean Air PRODUCTS</b> | 8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445<br>800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004<br>www.cleanairproducts.com |                      |          |
|  | DESCRIPTION.              | <b>Air Shower - 90 Degree<br/>         CAP701LP-RH-4954</b>  |                      |          |
|  | QUOTE NO.                 |  |                      |          |
|  | <b>DO NOT SCALE</b>       | DATE DRAWN<br>2/22/2019  | QUOTE FORM<br>004168 | REV<br>2 |

## CAP701 Air Shower Specification Sheet

### Air Shower- CAP701LP-RH-4954, Quote

#### Standard Electrical:

- Motor:**..... 5HP, 3600RPM, 182T frame, open drip, sealed ball bearing, Qty. 1  
Meets or exceeded U.S. EPAct and NRCan Canadian efficiency standards
- Blower:**..... High efficiency, Non-overloading aluminum airfoil, direct drive, overhead mounted
- Power Supply:**..... 480Volt, 60Hz, 3 Phase, 3 Wire w/Ground, 6.9 FLA, Gray painted steel electrical control panel, mounted in blower cabinet. Motor starter with electronic overloads inside control panel. Disconnect switch mounted on face of electrical control panel. UL Listed Panel.

#### Standard Construction:

- Shell:**..... Cold-rolled steel with white powder coat finish, interior and exterior.
- Doors:**..... Aluminum frame and Jamb, Clear safety glass (full), Closer on each door.
- Door Swing:**..... One Right Hand and One Left Hand. No charge for door swing change.
- Nozzles:**..... Anodized aluminum, adjustable, (32 Wall Nozzles, 2 Ceiling Nozzles).  
1900 CFM. Nozzle Velocity: 7800 LFPM average.
- Filters:**..... HEPA: 24"x24"x11-1/2", 99.99% filtration of 0.3 micron particles.  
Prefilters: 10"x20"x1" Pleated Merv 8, 2 Total.
- Cleaning Cycle:**..... 0 to 99 sec. Microprocessor controller. Optional Interlocks Recommended
- Service Access:**..... Filter, blower, and moter accessed from inside blower cabinet.
- Shipping Method:**.. Shipped partially disassembled. When uncrated, components will fit through a standard 3'0"x7'0" door.
- Lighting:**..... LED Light with ON/OFF switch accessed via. human machine interface (HMI).
- Sprinkler Sleeve:**.. One sleeve per section. Qty. 1

#### Notes: