


NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).

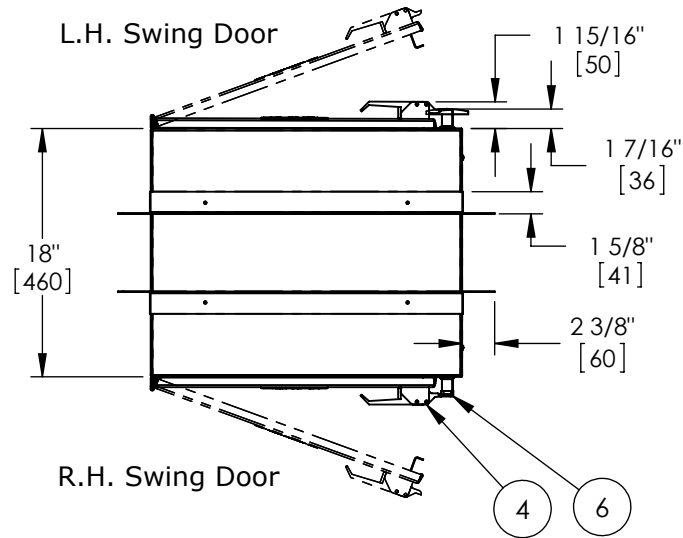

Features:

1. Clear Tempered Safety Glass
2. Stainless Steel Flush Mount Hinge
3. Stainless Steel Door Frame
4. Lever Compression Door Latch, Stainless Steel

Pass Thru Operation - One Hand:


Turn Interlock Handle (6) to
Operate Interlock
Pull Door Latch (4) to open door

Options Shown:



5. 8 Pc. Stainless Steel Mounting Frame
6. Interlock Handle, T, Non-Locking Stainless Steel

Notes:

1. Wall Cutout is **23-1/4" x 20-1/2"**
([E] + 1/2" x [D] + 1/2")
2. Material: Stainless Steel, Type 304, #4 Finish
3. Electrical Requirements: None

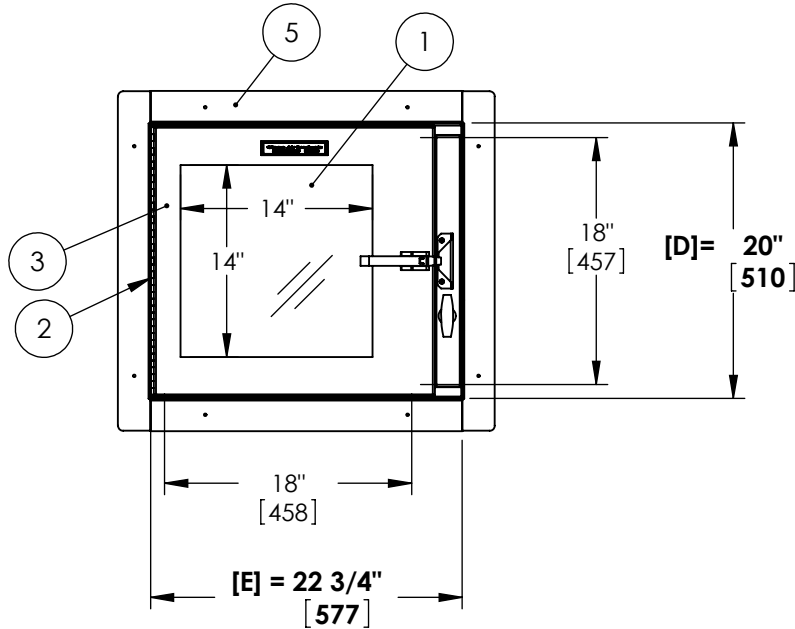

Customer Wall
Between Frames

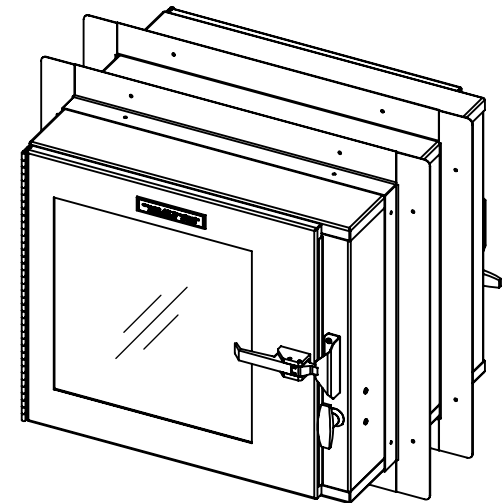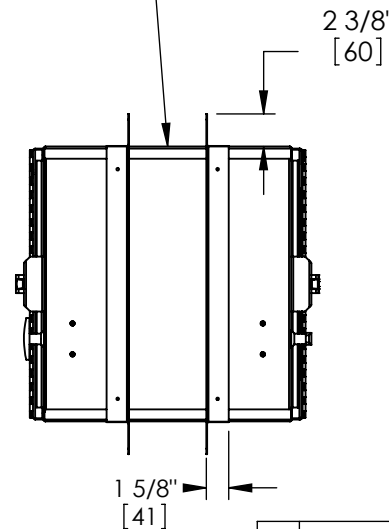

Note:
Interlocking and non-interlocking
units have the same exterior
dimensions unless noted

© COPYRIGHT 2010 CLEAN AIR PRODUCTS	Clean Air PRODUCTS		8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445 800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004 www.cleanairproducts.com		
	DESCRIPTION.		Pass Thru - Wall Mount, Stainless Steel - CAP18W-SST-18Wx18Hx18D		
	QUOTE NO.		DO NOT SCALE		
	DATE DRAWN 08/06/2010	QUOTE FORM 050151	REV 1	SHEET 1 of 2	

CAP18 Pass Thru - Optional Upgrades List

CAP18W-SST

- Material Options:.....**
- Type 316L #2b Finish Stainless Steel
 - Electropolished Type 316L #2b finish Stainless Steel
 - Electropolished Type 304 #4 finish Stainless Steel
- Window Options:.....**
- Clear Wire Safety Glass
 - Clear Laminated Safety Glass
 - Clear PVC
 - Electrostatic Dissipative (ESD) Polycarbonate
 - Clear Polycarbonate
 - Clear Acrylic
 - Yellow Acrylic
 - Ultra-Violet Light Filtering Acrylic
 - No Window (Solid Stainless Steel Door)
- Interlock Options:...**
- Mechanical Interlock, Stainless Steel T-Handle
 - Internal Mount Magnetic Interlock
(Increase Width by 3", Requires a 120 Volt Power Supply)
- Mounting Options:...**
- 8 Piece Stainless Steel Mounting Frame
 - 8 Piece Stainless Steel Flush-Style Mounting Frame
 - 8 Piece Stainless Steel Sloped Top Mounting Frame
 - Stainless Steel Support Gussets
 - Stainless Steel Support Legs
- Shelf Options:.....**
- Solid Stainless Steel Fixed Location, Removeable Shelf
 - Perforated Stainless Steel Fixed Location, Removeable Shelf
 - Solid Stainless Steel Non-Adjustable Set-In Shelf
 - Perforated Stainless Steel Non-Adjustable Set-In Shelf
 - Stainless Steel Catch Tray
- Latch Options:.....**
- Key-Locking Stainless Steel Lever Compression Door Latches
- Electrical Options:...**
(Requires 120 Volt Power Supply)
- Duplex Receptacle with Stainless Steel Cover
 - UV Light without Timed Shut Off
 - UV Light with Timed Shut Off
 - Door Position Indicator Lights
- Design Options:.....**
- Ventilation Couplings
 - Low-Outgassing Design