



NOTES: UNLESS OTHERWISE SPECIFIED

1. DIMENSIONS ARE IN INCHES (mm).


L.H. Swing Door

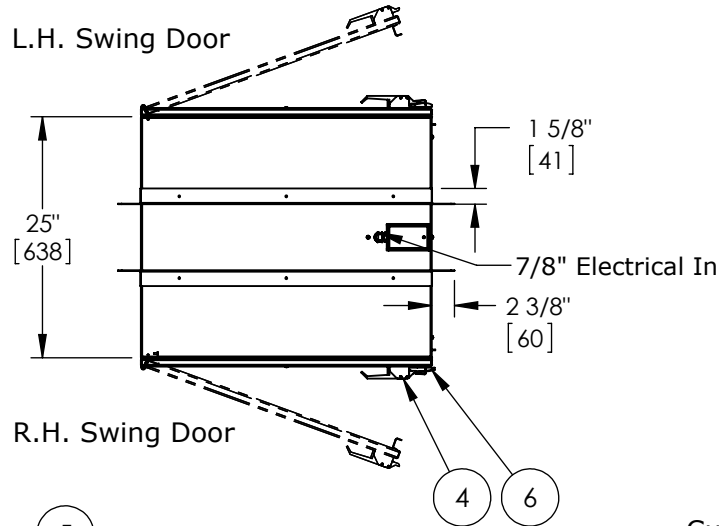

R.H. Swing Door

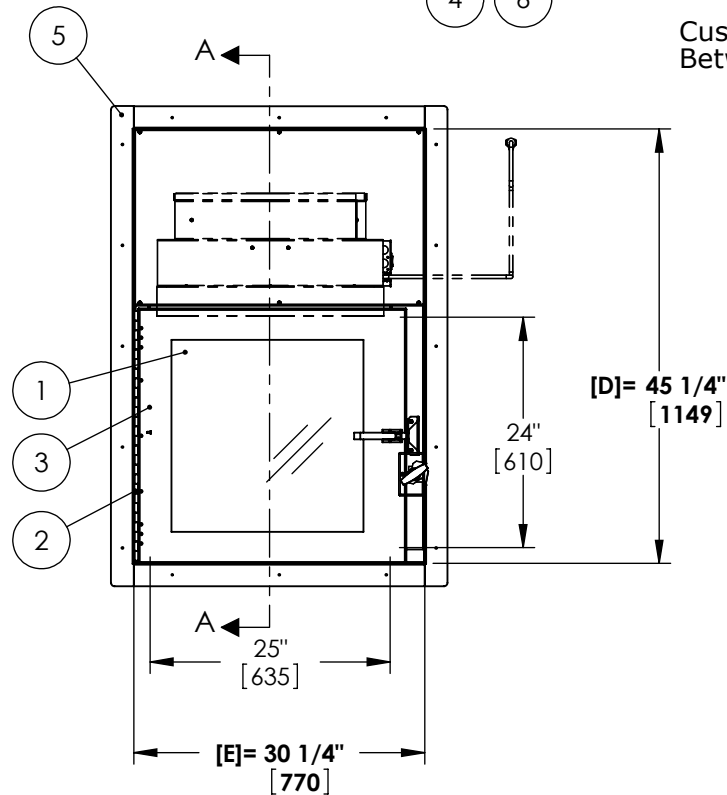

Customer Wall
Between Frames

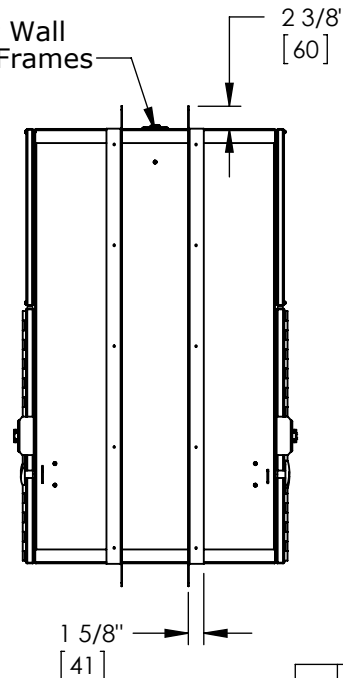

Features:

1. Clear Tempered Safety Glass
2. Stainless Steel Flush Mount Hinge
3. Stainless Steel Door Frame
4. Lever Compression Door Latch, Stainless Steel

Options Shown:


5. 8 Pc. Stainless Steel Mounting Frame
6. Interlock Handle, T, Non-Locking Stainless Steel

Notes:


1. Wall Cutout is $\frac{30-3/4" \times 45-3/4"}{([E] + 1/2" \times [D] + 1/2")}$
2. Material: Stainless Steel, Type 304, #4 Finish
3. Electrical Requirements: 120V, 60Hz, 1.2A

Pass Thru Operation - One Hand:

Turn Interlock Handle (6) to
Operate Interlock
Pull Door Latch (4)
to open door

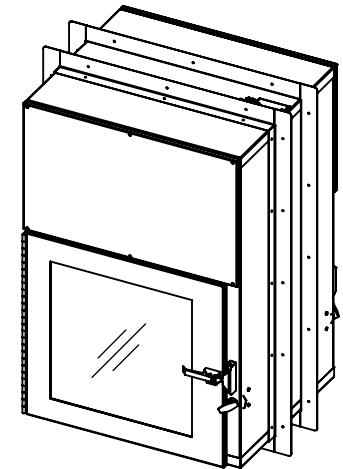

SECTION A-A
SCALE 1 : 26

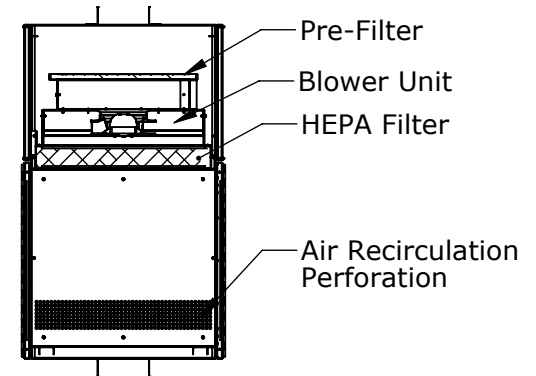

Note:
Interlocking and
non-interlocking
units have the same
exterior dimensions
unless noted

© COPYRIGHT 2010 CLEAN AIR PRODUCTS	Clean Air PRODUCTS 8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445 800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004 www.cleanairproducts.com			
	DESCRIPTION. Pass Thru - Wall Mount HEPA Filter, Stainless Steel -18WHF-SST-25Wx24Hx25D			
	QUOTE NO.			
	DO NOT SCALE	DATE DRAWN 11/08/2016	QUOTE FORM 075606	REV 1

CAP18 Pass Thru - Optional Upgrade List

CAP18WHF-SST

Material Options:.....

- Type 316L #2b Finish Stainless Steel
- Electropolished Type 316L #2b finish Stainless Steel
- Electropolished Type 304 #4 finish Stainless Steel

Window Options:.....

- Clear Wire Safety Glass
- Clear Laminated Safety Glass
- Clear PVC
- Electrostatic Dissipative (ESD) Polycarbonate
- Clear Polycarbonate
- Clear Acrylic
- Yellow Acrylic
- Ultra-Violet Light Filtering Acrylic
- No Window (Solid Stainless Steel Door)

Interlock Options:...

- Mechanical Interlock, Stainless Steel T-Handle
- Internal Mount Magnetic Interlock
(Increase Width by 3", Requires a 120 Volt Power Supply)

Mounting Options:...

- 8 Piece Stainless Steel Mounting Frame
- 8 Piece Stainless Steel Flush-Style Mounting Frame
- 8 Piece Stainless Steel Sloped Top Mounting Frame
- Stainless Steel Support Gussets
- Stainless Steel Support Legs

Shelf Options:.....

- Perforated Stainless Steel Fixed Location, Removeable Shelf
- Perforated Stainless Steel Non-Adjustable Set-In Shelf
- Stainless Steel Catch Tray

Latch Options:.....

- Key-Locking Stainless Steel Lever Compression Door Latches

Electrical Options:...
(Requires 120 Volt
Power Supply)

- Duplex Receptacle with Stainless Steel Cover
- UV Light without Timed Shut Off
- UV Light with Timed Shut Off
- Door Position Indicator Lights

Design Options:.....

- Low-Outgassing Design
- ULPA Upgrade to 99.999% on 0.12 Micron Particles
- Duplex Receptacle with Stainless Steel Cover
- Door Position Indicator Lights