


1. DIMENSIONS ARE IN INCHES (mm).

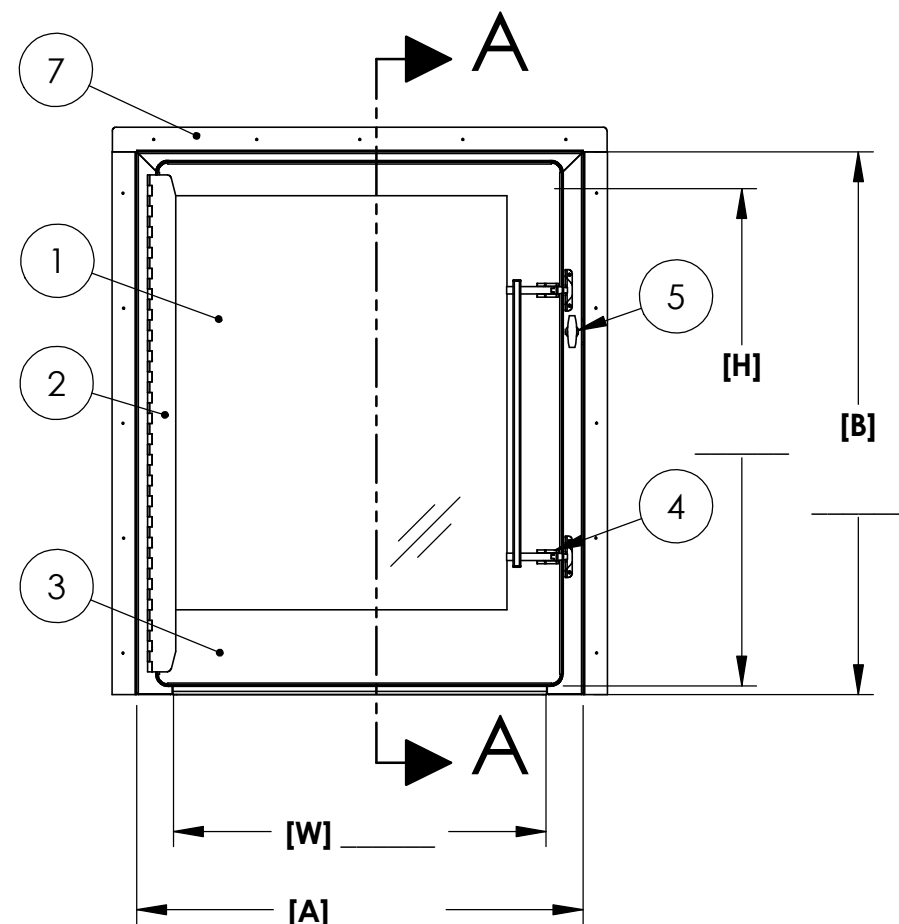

1. Clear Tempered Safety Glass
2. Stainless Steel Flush Mount Hinge
3. Stainless Steel Door Frame
4. Dual Over Center Compression Latches
With Linkage Bar - Stainless Steel


5. Mechanical Interlock, Non-Locking, Stainless Steel T-Handles
6. 6 Pc. Universal Stainless Steel Mounting Frame Set
7. Integrated Fully Welded Floor, Stainless Steel

- Cabinet Material: Stainless Steel, Type 304, #4 Finish
- Electrical Requirements: None
- Interlocking and Non-interlocking Units Have The Same Exterior Dimensions Unless Noted.
- Wall Cutout is
$$\frac{x}{([A] + 1/2" \times [B] + 1/2")}$$

**Turn The Interlock Handle (5) 90° To Unlock The Side, Then Pull The Door Latch (4) To Open The Door.
(Only one side can be unlocked at a time)**

between frames

$1\frac{5}{8}" [41]$ $2\frac{3}{8}" [60]$

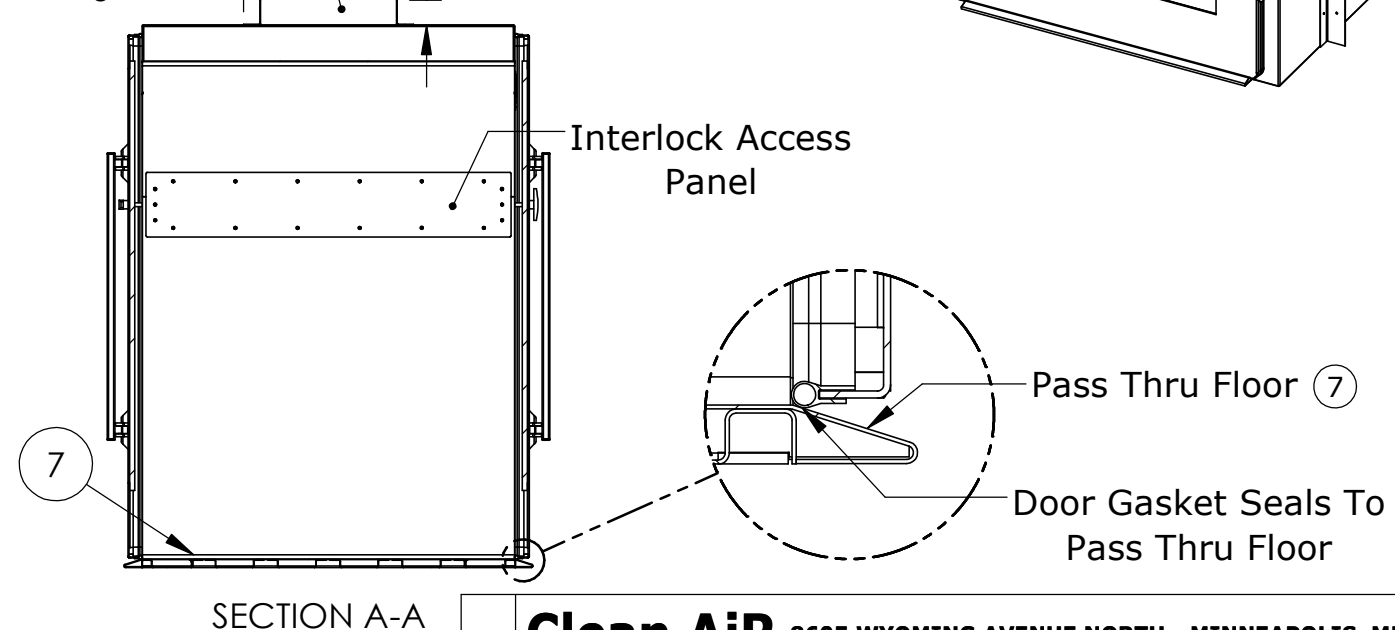

SECTION A-A

© COPYRIGHT 2010
CLEAN AIR PRODUCTS

Clean AiR PRODUCTS

8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445
800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004
www.cleanairproducts.com

DESCRIPTION.	Pass Thru - Floor Mount, Stainless Steel -		
	CAP18FFB-SST-	Wx	Hx D

QUOTE NO.	
-----------	--

DO NOT SCALE

DATE DRAWN
10/21/2019

QUOTE FORM
104689

REV	1
-----	---

SHEET
1 of 1

W = Inside Width
H = Inside Height
D = Inside Depth
A = W + 7 1/8"
B = H + 4 7/16"

