
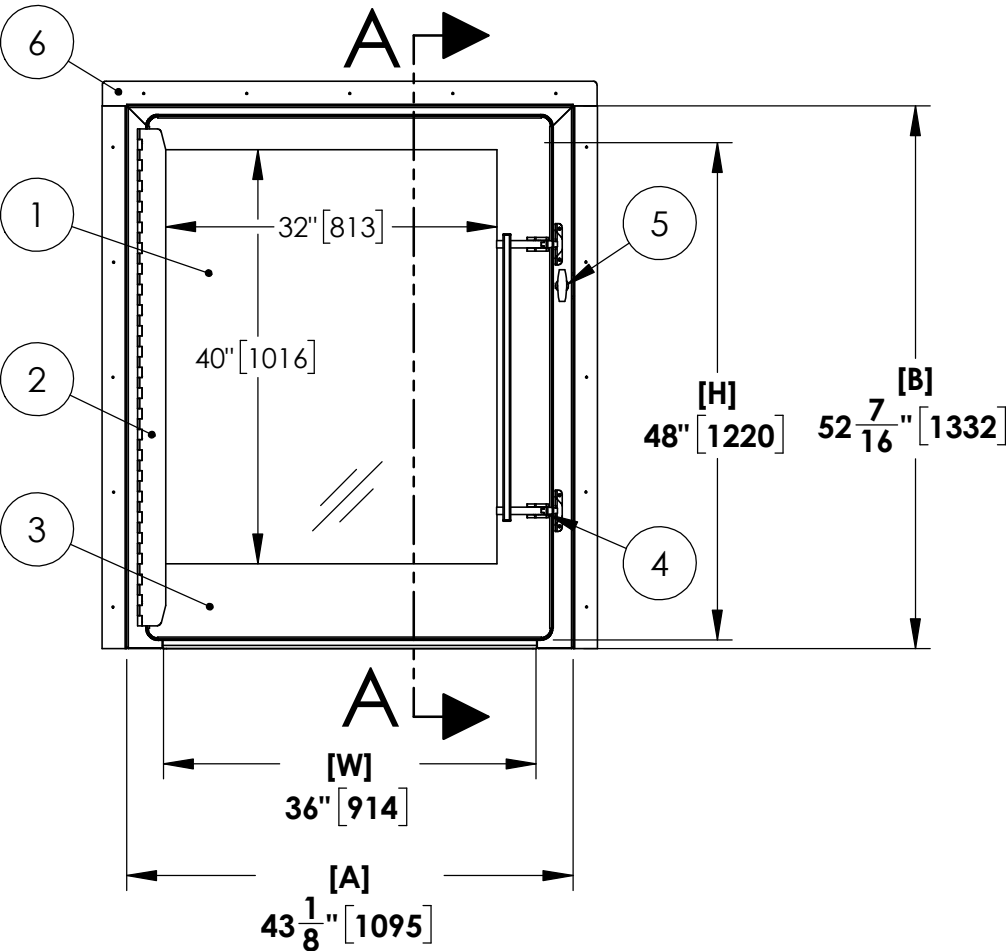


NOTES: UNLESS OTHERWISE SPECIFIED
1. DIMENSIONS ARE IN INCHES (mm).

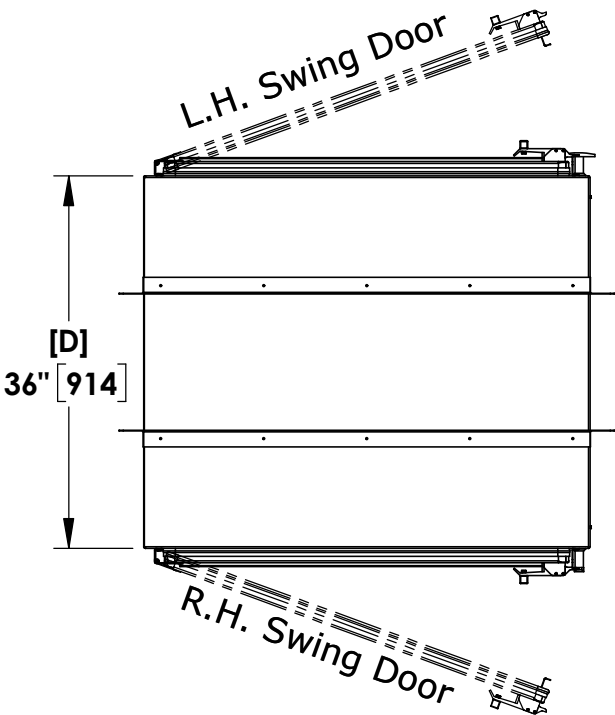

Features:

- 1. Clear Tempered Safety Glass
- 2. Stainless Steel Flush Mount Hinge
- 3. Stainless Steel Door Frame
- 4. Dual Over Center Compression Latches With Linkage Bar - Stainless Steel

Options Shown:

- 5. Mechanical Interlock, Non-Locking, Stainless Steel T-Handles
- 6. 6 Pc. Universal Stainless Steel Mounting Frame Set
- 7. Integrated Fully Welded Floor, Stainless Steel

Notes:


- Cabinet Material: Stainless Steel, Type 304, #4 Finish
- Electrical Requirements: None
- Interlocking and Non-interlocking Units Have The Same Exterior Dimensions Unless Noted.
- Wall Cutout is **43-5/8" x 52-15/16"**
([A] + 1/2" x [B] + 1/2")

Pass Thru Interlock Operation (One Hand):

Turn The Interlock Handle ⑤ 90° To Unlock The Side, Then Pull The Door Latch ④ To Open The Door.
(Only one side can be unlocked at a time)


Pass Thru Dimensions:

W = Inside Width
H = Inside Height
D = Inside Depth
A = W + 7 1/8"
B = H + 4 7/16"

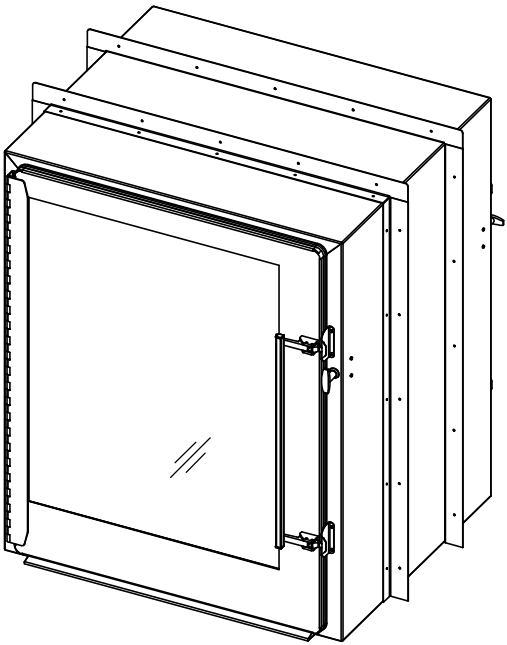


Customer Wall
Between Frames

1 5/8" [41] 2 3/8" [60]

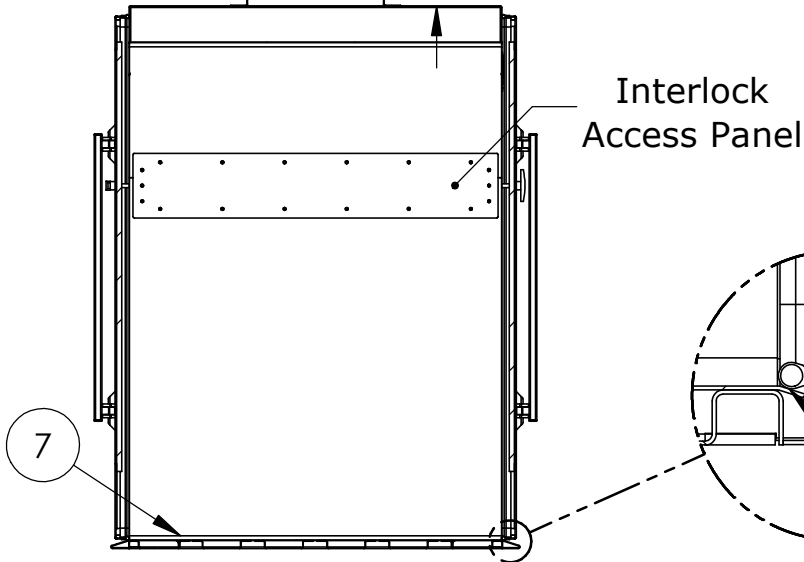

SECTION A-A

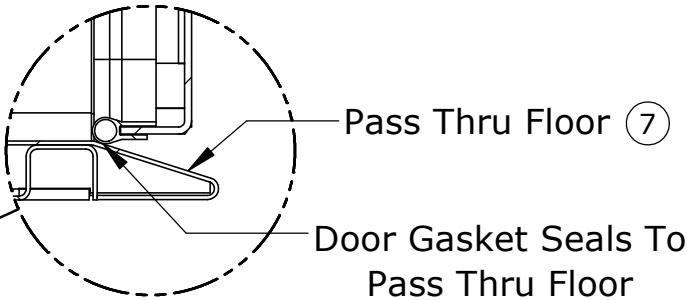

Pass Thru Floor ⑦

Door Gasket Seals To
Pass Thru Floor

© COPYRIGHT 2010
CLEAN AIR PRODUCTS

Clean Air
PRODUCTS

8605 WYOMING AVENUE NORTH • MINNEAPOLIS, MN 55445
800-423-9728 • ph: 763-425-9122 • fax: 763-425-2004
www.cleanairproducts.com

DESCRIPTION. **Pass Thru - Floor Mount, Stainless Steel -
CAP18FFB-SST-36Wx48Hx36D**

QUOTE NO.

DO NOT SCALE

DATE DRAWN
10/21/2019

QUOTE FORM
104687

REV
1

SHEET
1 of 1